



H8860 Quick-Start guide


1. Firstly, you must ensure you've inserted a SIM card into the SIM slot, attached the antennas you want to use and plugged in the power supply.
2. Power up the router and connect an Ethernet cable into your laptop/PC
3. Give your laptop/PC a static IP address in the 192.168.8.x range
4. Access the router's IP address via your browser. By default, this is 192.168.8.1
5. Login with the default username/password of admin/admin

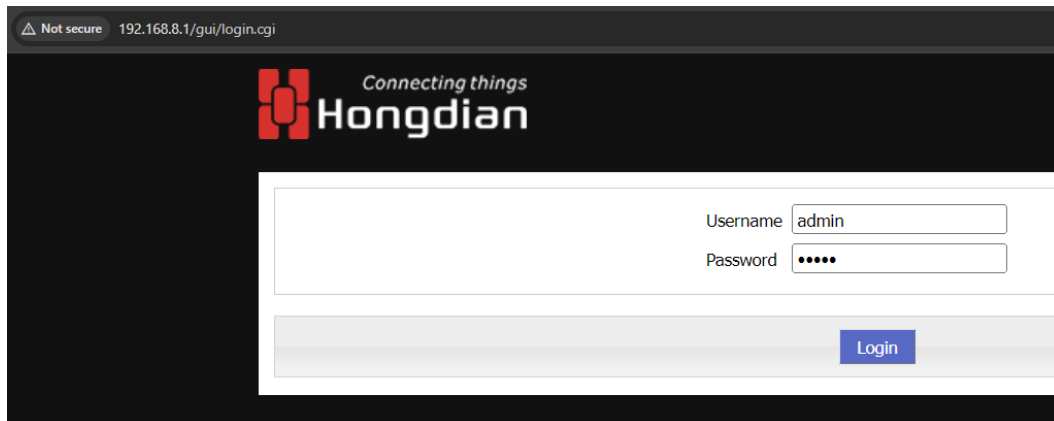

6. Navigate to the Network – WLAN settings and Enable the WLAN status for WLAN and WLAN_5G. Edit any other settings you want and click Save.

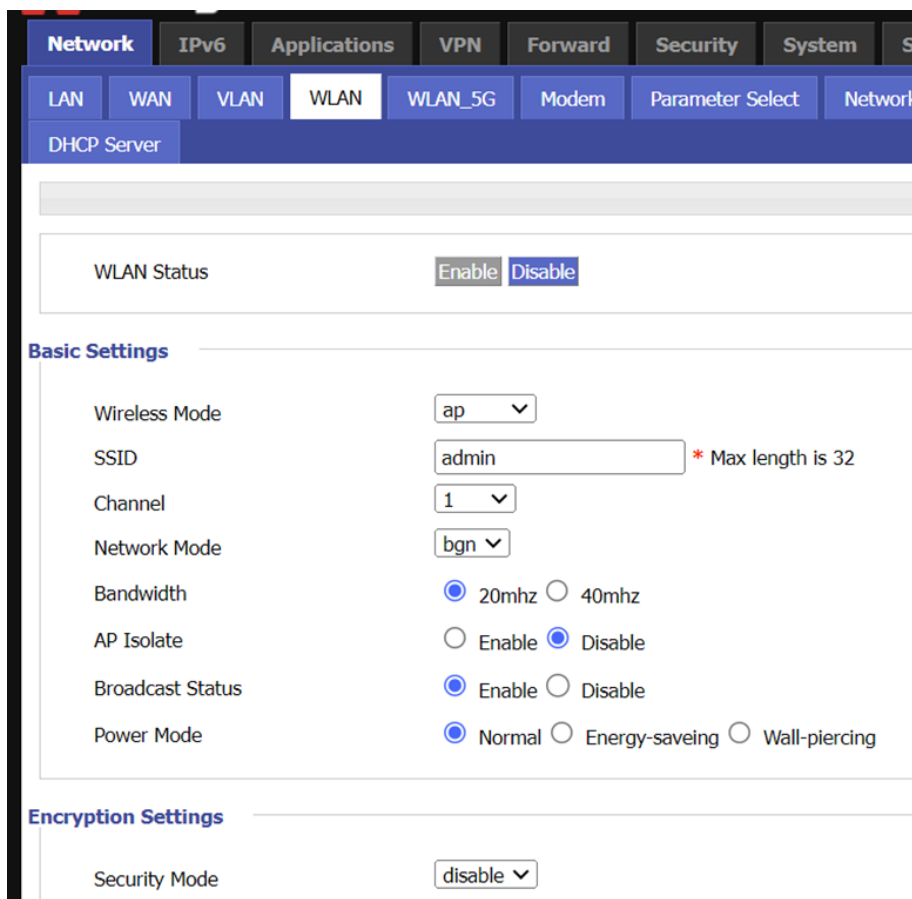

7. Navigate to the Network – Modem settings and click Mod (Modify) on the interface. Configure the APN settings for your SIM card in that window and then Save.

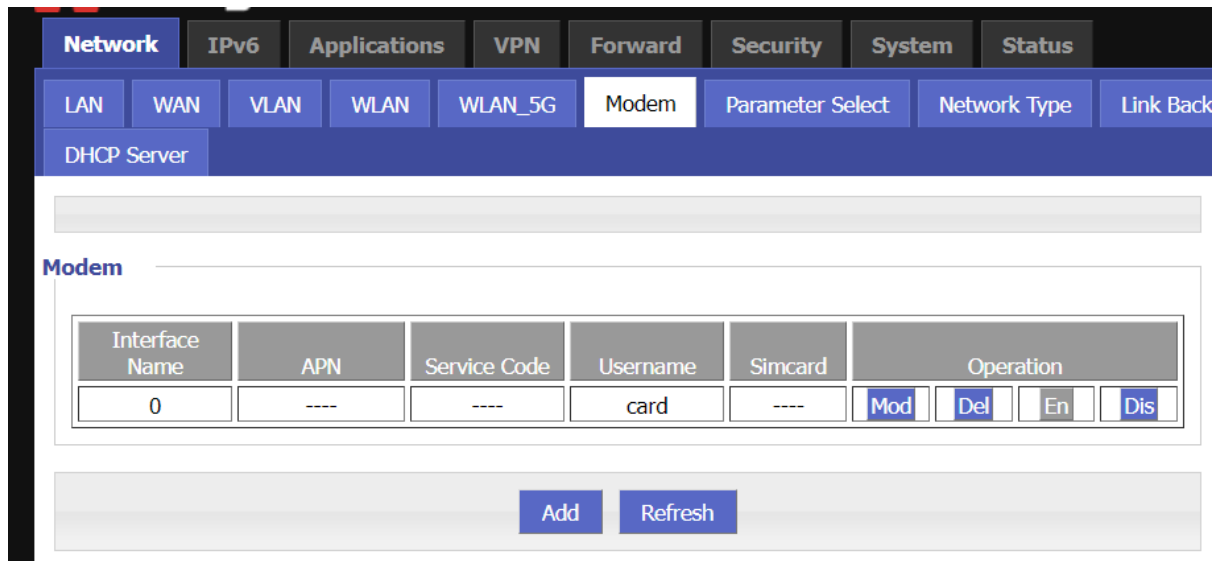

Basic Settings

Interface Name * Max length is 12

APN Max length is 64

Service Code Max length is 64

Username Max length is 64

Password Max length is 64

PIN Max length is 64

Network Type ▼

Protocol Type ▼

Simcard SIM1 SIM2

Advanced Settings [Hide](#)

Authentication

CHAP Negotiation Disable

PAP Negotiation Disable


CHAP+PAP Negotiation Disable

[Save](#)

[Return](#)

Your router is now fully configured to connect to your SIM card's mobile network and provide WiFi to connect your devices too!

Modem

Modem Select	0
Up Time	00:03:56
Modem Status	connected
Network Type	NR5G-NSA
Signal	 (12)
IP Address	100.92.220.246
DNS	109.249.185.133
SIM Select	sim1
SIM Status	ready
SIM ICCID	8944303613114065029F
SIM IMSI	234304304652400
Operator	EE EE

Band Info

Band	LAC	PCI	CELL ID	RSSI	RSRP	RSRQ	SINR
----	----	65535	----	----	-32768	-32768	-32768
3	DA2	348	256301	-89	-120	-12	11