



Setting up your Teltonika router to use the second SIM slot

This applies to all the dual-SIM routers from Teltonika.

By default, the router only looks at SIM slot 1 for mobile connections.

To activate SIM slot 2, you should change the mode from Basic to Advanced in the top right corner of the interface, from there go the Mobile page under the Network tab.

From here, depending on what you're trying to accomplish, you can either enable SIM slot 2 as the 'Default SIM' via a tick box or you can go to the SIM switching settings and set some parameters under which you want the router to switch from SIM card to the other.